

# COMPONENT COVERAGE GUIDE

EXTENDED PROTECTION PLAN &  
CERTIFIED PRE-OWNED WRAP



INFINITI.

ELITE.  
PROTECTION  
PROGRAM

OVER 1,850 REASONS TO FEEL SECURE



With over 1,850 vehicle components covered, virtually every aspect of your INFINITI's mechanical performance is well protected

## EXPANDED MECHANICAL COVERAGE BEYOND YOUR FACTORY WARRANTY

COVERAGE SO EXTENSIVE, ONLY A FEW ITEMS ARE NOT COVERED: The Elite Extended Protection Plan offers exclusionary coverage, the highest level of coverage that a vehicle qualifies for once it is outside the manufacturer's warranty. Virtually all major components of your vehicle are covered,<sup>1</sup> providing you with an unprecedented level of mechanical protection after your factory warranty expires.

CERTIFIED PRE-OWNED VEHICLE buyers can also upgrade their mechanical coverage to equal the components detailed in this brochure by adding an Elite CPO Wrap plan. The total replacement value of the 220+ additional components covered by the Elite CPO Wrap is almost \$50,000.<sup>2</sup>

## VEHICLE COMPONENTS COVERED

Vehicle Components Covered	PNC	Coverage	Vehicle Components Covered	PNC	Coverage	Vehicle Components Covered	PNC	Coverage
<b>INFOTAINMENT</b>			<b>CLARION AUDIO/COMBO UNIT</b>			<b>CONT UNIT - CLOSURE, TRUNK LID</b>		
CELL PHONE SWITCH	18931	■	CLARION AUDIO/COMBO UNIT	2790A	■	CONT UNIT - CLOSURE, TRUNK LID	28563	■
REAR WINDOW ANTENNA AMPLIFIER	25190	■	PANASONIC AUDIO/COMBO UNIT	2790C	■	CONTROL UNIT-2ND SEAT	28568	■
RELAY - AUDIO AMPLIFIER	25198	■	BOSE SPEAKER	2793A	■	BRKT-DISCONNECT SW	29706	■
NAVI SPEAKER RELAY	25273	■	CLARION SPEAKER AMPLIFIER	2806C	■	CABLE - KEY INTERLOCK	34908	■
A/V MASTER CONTROL UNIT NS	25914	■	SPEAKER -WOOFER	2806H	■	RELEASE CABLE	36329	■
NAVI GPS ANTENNA ASSEMBLY	25957	■	PANASONIC CD PLAYER	2818C	■	TRUNK LID INSIDE RELEASE HANDLE	36400	■
ANTENNA-IVCS/GPS	25976	■	SONY CD PLAYER	2818D	■	WHEEL ASSY.	40300	■
DASH AUX AUDIO JACK	26823	■	MOBILE ENTERTAINMENT SYSTEM	AA018	■	SPRING - CLUTCH PEDAL RETURN	46586	■
SPEAKER	27933	■	SATELLITE RADIO	AA025	■	ACTIVE GRILLE SHUTTER	62304	■
SPEAKER - WOOFER	27934	■	SPEAKER ASSEMBLY	AA170	■	HINGE ASSY. - HOOD	65400	■
AUX AUDIO SYS CABLE	27946	■	COMPACT COMMUNICATOR	AA180	■	HOOD HINGE TORSION BAR	65420	■
ANTENNA	27960	■	CD CHANGER CARTRIDGE	B8118	■	HOOD STAY	65470	■
RADIO FINISHER	28041	■	<b>BODY &amp; INTERIOR</b>			MALE ASSY. - HOOD LOCK	65601	■
AV/SAT RADIO TUNER ASSY.	28050	■	SWITCH - ASCD SET/CANCEL	18930	■	CABLE - HOOD LOCK CONTROL	65620	■
PRE-AMP SPEAKER AMPLIFIER	28060	■	SHUTTER ASSY, RADIATOR	21421	■	SECONDARY HOOD LOCK CONTROL ASSY.	65670	■
REAR AMPLIFIER	28063	■	LOCK-LID,CHARGE PORT	23600	■	BASE-CHARGE PORT	65712	■
BODY SONIC AMPLIFIER	28067	■	COMBINATION METER LENS	24813	■	ASSIST AIR BAG LID	68290	■
POWER SUPPLY BOX	28089	■	CABLE - SPEEDOMETER	25050	■	LOCK SET - GLOVE BOX LID	68630	■
VIDEO OR NAVI DISPLAY ASSEMBLY	28090	■	LANE DEPARTURE SENSOR SWITCH	25134	■	FRAME - SUN ROOF	73640	■
FES VIDEO MONITOR	28091	■	SWITCH - PARK,PRO-PILOT	25139	■	RAIL-GUIDE	73662	■
DISPLAY MOTOR ASSY.	28092	■	SWITCH - HEAT UP	25144	■	BRACKET-SUN ROOF MOTOR	73670	■
INTEGRATED DISPLAY ASSY.	28094	■	VDC OFF SWITCH	25147	■	DEFLECTOR - AIR, SUN ROOF	73675	■
CABLE-LVDS AUDIO SYSTEM	28096	■	STEERING WHEEL HEATER SWITCH	25148	■	MOTOR - SUN ROOF	73685	■
DVD UNIT	28119	■	SWITCH ASSY.-ECO MODE	25154	■	LISTING - WIRE	73921	■
FRONT DOOR TWEETER	28137	■	SWITCH ASSY. - COMBINATION (LIGHTING)	25160	■	CLAMP/BELT - SPARE TIRE	74630	■
REAR DOOR TWEETER	28138	■	SWITCH-TRIP/RESET	25174	■	SWITCH - FUEL FILLER LID OPENER	78826	■
SEAT SPEAKER	28172	■	SWITCH ASSY. - AIR CONTROL, SEAT	25175	■	FUEL LID OPENER ACTUATOR	78852	■
CD AUTO CHANGER	28184	■	PEDAL ADJ SWITCH ASSY.	25180	■	REAR WINDOW REGULATOR MOTOR	79701	■
TELEPHONE ANTENNA SET	28201	■	HEADLAMP AIMING SWITCH	25188	■	FINISHER-REAR PARCEL SHELF SIDE	79912	■
SAT ANTENNA ASSY.	28208	■	BACK DOOR LOCK ACTUATOR	25189	■	LINKAGE P SHELF	79914	■
ANTENNA ROD/MAST	28215	■	SWITCH -SUN ROOF SLIDE	25191	■	MOTOR P SHELF	79915	■
SAT ANTENNA BASE COVER	28228	■	RELAY - SUN ROOF	25192	■	HINGE ASSY. - FRONT DOOR	80400	■
SAT ANTENNA ADAPTOR	28243	■	RELAY- FUEL LID OPENER	25271	■	LINK DOOR - STOPPER	80430	■
ANTENNA FDR-BLUETOOTH	28245	■	RR SEAT BACK RELEASE RELAY	25298	■	LOCK ASSY. - DOOR	80502	■
REMOTE RADIO SWITCH	28268	■	SWITCH -POWER SEAT	25310	■	ROD ASSY. - REMOTE CONTROL	80512	■
REAR AUDIO PANEL	28269	■	SEAT SLIDE SWITCH	25314	■	STRIKER ASSY. - DOOR LOCK	80570	■
ASSY-MICROPHONE	28301	■	HEATED SEAT RELAY	25325	■	CYLINDER ASSY. - DOOR LOCK	80600	■
VTR JACK	28318	■	SWITCH-CLOSURE, BACK DOOR	25386	■	REGULATOR ASSY. - FRONT DOOR	80700	■
A-V CONTROL ASSY.	28330	■	SWITCH - FUEL FILLER LID OPENER	25394	■	HOOK-SUNSHADE	82245	■
DISPLAY CONTROL UNIT ASSY.	28332	■	SWITCH ASSY. - FOLDING ROOF	25452	■	PARTITION WINDOW SHADE ASSY.	82275	■
MICROPHONE UNIT- TELEPHONE	28336	■	REAR POWER SEAT SWITCH	25494	■	HINGE ASSY. - REAR DOOR	82400	■
VOICE-ACTIVATED CONTROL MODULE	28337	■	POWER FOLD SEAT SWITCH	25502	■	LOCK ASSY. - REAR DOOR	82502	■
PHONE ADAPTOR-BLUE TOOTH	28338	■	SWITCH - REMOTE CONTROL MIRROR	25570	■	BACK DOOR OPEN/CLOSE MOTOR	82580	■
BONDING(GROUNDING) WIRE	28360	■	HEATED MIRROR SWITCH	25580	■	REGULATOR ASSY. - DOOR WINDOW	82700	■
PHONE POWER CONTROL UNIT NS	28384	■	SWITCH - 3RD SEAT RECLINING	25945	■	LOCK ASSY. - FUEL FILLER LID	84360	■
TV SWITCH ASSY.	28395	■	ICC WARNING CHIME	26353	■	LATCH SUBFRAME	84376	■
AV/NAVI SWITCH ASSY.	28396	■	BLOWER MOTOR COVER	27220	■	CENTERING HINGE	84410	■
VOLUME/TUNING SWITCHES	28398	■	MOTOR-LIFT,3RD ROW	27381	■	STRIKER - BACK DOOR LOCK	84420	■
IPOD ADAPTER UNIT	28411	■	CONT UNIT - CLOSURE	27573	■	PARCEL SHELF TRUNK OPEN LEVER	84442	■
AUX AUDIO SYS CONNECTOR	28413	■	DCM CONTROL UNIT	28340	■	CABLE - FUEL FILLER/TRUNK LID OPENER	84450	■
CONNECTOR ASSY USB	28423	■	CAMERA ASSY-MIRROR,SMART ROOM	28445	■	CYLINDER - TRUNK LID/TAIL GATE	84460	■
HEADPHONE AMPLIFIER	28438	■	REAR SONAR SENSOR BRACKET	28452	■	SOLENOID/MOTOR - TRUNK LID OPENER	84471	■
TIMER - AUTO ANTENNA	28490	■	REAR VIEW CONTROL ASSY	28462	■	HINGE ASSY. - TRUNK LID/BACK DOOR	84510	■
SOUND BALANCER	29350	■	SENSOR-LIFT,3RD ROW	28477	■	STAY SET, TENSION BAR - TRUNK LID	84532	■
			CONTROL UNIT - FOLDING ROOF	28521	■	SWITCH - TRUNK LID OPENER CANCEL	84665	■
						ACTUATOR - Q45 TRUNK LID OPENER	84680	■

Coverage: All components shown are covered by the Elite Extended Protection Plan. ■ = Covered by INFINITI CPO Limited Warranty ■ = Covered by Elite CPO Wrap Plan

<sup>1</sup>There are only a few items /systems that are not covered. Exclusions include but are not limited to items such as paint /body, interior trim, head lamp / tail lamp assemblies and vehicle maintenance. Components covered are subject to change. For complete information concerning components covered, and those components which are excluded from coverage, please refer to your contract or contact your INFINITI retailer.

<sup>2</sup>Based on Elite CPO Wrap repair records from CY2020. May vary by model and year. Your experience may be different.

Vehicle Components Covered	PNC	Coverage
<b>BODY &amp; INTERIOR CONTINUED</b>		
SWITCH SENSOR	84991	■
SEAT AIR CONTROL SWITCH	87016	■
FAN MOTOR ASSY.	87305	■
FAN MOTOR CONTROL UNIT	87306	■
POWER FOLD CONTROL UNIT	87316	■
SENSOR-FRONT SEAT OCCUPANT	87333	■
BLOWER ASSY - FRONT SEAT	87334	■
LIFT DEVICE ASSY.	87400	■
DEVICE ASSY. - RECLINING	87401	■
POWER SEAT RECLINER DRIVE CABLE	87403	■
BOLT - SPECIAL	87408	■
SLIDE ASSY.	87501	■
FRONT LEFT SEAT SLIDE ASSY./BRACKET	87502	■
POWER SEAT DRIVE CABLE	87503	■
SWITCH LIMIT FR SEAT	87504	■
POWER LUMBAR SUPPORT SEAT ASSY.	87641	■
SLIDE - ASSY.	87653	■
LIFT ASSY.	87654	■
ELECTRIC RECLINING DEVICE ASSY.	87655	■
HARNASS ASSY. - REAR SEAT	88019	■
UNIT ASSY. - HEATER, REAR SEAT CUSHION	88335	■
SWITCH WALK IN SEAT BACK SIDE	88406	■
REAR RECLINING DEVICE ASSY.	88451	■
REAR POWER SEAT MOTOR	88510	■
REAR POWER SEAT SLIDE	88551	■
RELEASE HANDLE ASSY-REAR SEAT CUSHION	88552	■
UNIT ASSY. - HEATER, REAR SEAT BACK	88635	■
CABLE-SLIDE,3RD SEAT	89604	■
BRACKET-BACK DOOR STAY	90459	■
ACTUATOR-TAIL GATE OPENER	90551	■
POWER BACK DOOR DRIVE ASSY	90560	■
MOTOR ASSY. - LOCK	91295	■
REAR BODY HEAT INSULATOR	93828	■
STRIKER LATCH SUBFRAME FR	94377	■
MIRROR - REMOTE CONTROL	96302	■
MIRROR ASSY. - INSIDE	96321	■
MIRROR ASSY-SMART ROOM	96323	■
ACTUATOR ASSY. - MIRROR	96367	■
POWER FOLDING MIRROR ACTUATOR	96370	■
HOME LINK VISOR - SUN	96401	■
INDICATOR - A/T CONTROL LEVER	96940	■
RELEASE HANDLE-CONSOLE,REAR	96957	■
LINKAGE ASSY. - FOLDING ROOF	97006	■
REAR LATCH ASSY.	97051	■
MAIN DRIVE CYLINDER	97060	■
TRUNK LID CYLINDER	97062	■
HOSE - MAIN DRIVE CYLINDER	97063	■
HOSE PAIR TRUNK LID CYLINDER	97064	■
HOSE PAIR LATCH CYLINDER	97065	■
CASIN - HYDRAULIC PUMP	97068	■
LATCH ASSY. - RHT SIDE	97080	■
HYDRAULIC PUMP	97091	■
LOCK ASSY. - FOLDING ROOF	97095	■
LATCH CYLINDER	97098	■
SPRING CLIP TRUNK LID CYLINDER	97099	■
CYLINDER ROOF LOCK	97102	■
BOWDEN CABLE	97138	■
TUBE DRAIN	97168	■
SHADE ASSY-REAR SIDE WINDOW	97513	■
REAR WINDOW SHADE GEAR/MOTOR ASSY	97581	■
AUTO DRIVE POSITION CONTROL	98800	■
REAR VIEW CAMERA KT	AA158	■
<b>BRAKES</b>		
RELAY-STOP LAMP	23171	■
IBA SWITCH	25122	■
SWITCH-BRAKE OFF,EMERGENCY	25124	■
TCS SWITCH ASSY.	25145	■
ICC STRNG SWITCH	25185	■
ICC BRAKE SWITCH	25186	■
ABS MOTOR RELAY	25187	■
VDC/TCS/ABS RELAY BOX	25285	■
VDC/TCS/ABS CONTROL ASSY.	25286	■
SWITCH - STOP LAMP	25320	■
SENSOR-LOW BRAKE PRESSURE	31960	■
CONTROL ASSY. - HAND BRAKE	36010	■
SWITCH - PARKING BRAKE	36011	■
PARKING BRAKE DAMPER	36055	■
ROD - RELEASE	36327	■
SPRING - HAND BRAKE LEVER	36337	■
ROD/CABLE - HAND BRAKE/FRONT	36402	■

Vehicle Components Covered	PNC	Coverage
NUT - HAND BRAKE CABLE ADJUST	36437	■
ROD - CROSS CABLE	36451	■
ROD - REAR CABLE	36452	■
EQUALIZER	36518	■
SPRING - RETURN	36545	■
ADJUSTER - REAR CABLE	36547	■
NUT - WHEEL	40224	■
TIRE PRESSURE SENSOR SEAL	40702	■
TIRE PRESSURE ANTENNA	40740	■
YOKE - CALIPER	41025	■
PIN - HOLD DOWN	41040	■
PIN - PIVOT	41041	■
SPRING - ANTI-SQUEAL	41083	■
CLIP - ANTI-RATTLE	41086	■
CALIPER ASSY. - FRONT	41110	■
PISTON & SEAL	41120	■
PLATE - FRONT BAFFLE	41151	■
CALIPER ASSY. - REAR	44010	■
BACK PLATE	44020	■
BODY - CALIPER	44025	■
EXTENSION LINK	44075	■
PIN - ANTI-RATTLE	44081	■
SPRING - PAD	44082	■
SPRING - RETURN, REAR BRAKE	44090	■
LEVER ASSY. - TOGGLE	44095	■
WHEEL CYLINDER ASSY.	44100	■
TOGGLE LEVER	44118	■
PLATE - BAFFLE	44151	■
PARKING BRAKE ANCHOR	44180	■
ADJUSTER ASSY.	44200	■
CYLINDER ASSY. - BRAKE MASTER	46010	■
CYLINDER-SIMULATOR, BRAKE STROKE	46011	■
ELECTRIC UNIT-ABS ACTUATOR	46012	■
CAP - RESERVOIR	46020	■
SEAL - RESERVOIR TANK	46045	■
INDICATOR ASSY. - LEVEL	46048	■
PISTON ASSY.	46063	■
RING - SNAP	46082	■
TANK - OIL RESERVOLR	46090	■
STRAINER - OIL	46093	■
RESERVOIR HOSE	46113	■
PIN - CLEVIS	46123	■
FRONT BRAKE HOSE	46201	■
REAR BRAKE HOSE	46211	■
PIPE - BRAKE	46284	■
CONNECTOR	46313	■
NP VALVE (LOAD SENSING VALVE)	46400	■
PROPORTIONING VALVE	46401	■
AUTO ADJUSTING BRAKE PEDAL	46501	■
STOPPER ASSY. - PEDAL	46518	■
PEDAL - BRAKE	46520	■
BUSHING - BRAKE PEDAL	46525	■
SHAFT - BRAKE FULCRUM	46560	■
SLEEVE - PEDAL SHAFT	46580	■
SPRING - BRAKE PEDAL RETURN	46585	■
BRAKE BOOSTER ASSY.	47210	■
SPACER - BRAKE BOOSTER	47211	■
CONTROL ASSY.-BOOSTER	47213	■
ABS ACCUMULATOR	47215	■
BRAKE PRESSURE SENSOR ASSY.	47230	■
HOSE - BRAKE BOOSTER	47471	■
CONNECTOR - BRAKE BOOSTER	47475	■
VALVE ASSY. - CHECK	47478	■
ACTUATOR ASSY.	47600	■
ABS ACTUATOR RELAY	47605	■
ACTUATOR BRACKET	47840	■
MODULE ASSY.	47850	■
ABS/TCS CONTROL UNIT ASSY.	47851	■
CAPACITOR ASSY	47881	■
SENSOR ASSY.(RR) - ANTI-SKID	47900	■
SENSOR ASSY.(FR) - ANTI-SKID	47910	■
SENSOR - BRAKE STROKE	47920	■
DECELERATION SENSOR ASSY.	47930	■
STEERING ANGLE SENSOR ASSY.	47945	■
ROTOR ASSY.(RR) - SENSOR	47950	■
BRACKET - FRONT SENSOR	47960	■
ROTOR ASSY.(FR) - SENSOR	47970	■
TUBE & HOSE ASSY. - RR ACTR, RH	52503	■
TUBE & HOSE ASSY. - RR ACTR, LH	52504	■
TUBE & HOSE ASSY. - RR ACTR, FR-A	52505	■
TUBE & HOSE ASSY. - RR ACTR, FR-B	52506	■

Vehicle Components Covered	PNC	Coverage
<b>DRIVE AXLE (FWD/RWD/AWD)</b>		
DIFFERENTIAL LOCK UNIT	28496	■
4WD DRAIN PLUG	32104	■
SHAFT - PROPELLER	37000	■
CENTER BEARING BRACKET	37010	■
BRACKET - CENTER BEARING	37511	■
INSULATOR - CENTER BEARING	37522	■
HEAT BRACKET/SHIELD-PROPELLER SHAFT	37530	■
HYPOID GEAR & PINION SET	38100	■
BOLT - DRIVE GEAR	38102	■
BEARING - PINION REAR	38120	■
BEARING - PINION FRONT	38140	■
SPACER - PINION BEARING	38165	■
SPACER - PINION PILOT BEARING	38169	■
SEAL - OIL, DRIVE PINION	38189	■
FLANGE - COMPANION	38210	■
FLANGE - SIDE	38220	■
FLANGE - 4WD SIDE	38221	■
DIFFERENTIAL SIDE SHAFT ASSY.	38230	■
DIFF SIDE SHAFT ASSY.	38231	■
EXTENSION TUBE RETAINER	38232	■
DIFFERENTIAL SIDE BEARING ASSY.	38242	■
FINAL DRIVE ASSY.	38300	■
HOUSING - FINAL DRIVE	38310	■
CARRIER - 4WD GEAR	38311	■
GASKET - REAR COVER	38320	■
BREATHER - AIR, TRANSFER	38322	■
BREATHER	38323	■
SEAL-OIL,LH SIDE	38336	■
RETAINER - 4WD SIDE BEARING	38341	■
SEAL - OIL, SIDE	38342	■
SIDE RETAINER O-RING SEAL	38343	■
OIL SEAL - 4WD DIFF. SIDE	38344	■
O-RING - 4WD SIDE RETAINER	38345	■
AXLE TUBE O-RING SEAL	38346	■
SIDE O-RING SEAL	38347	■
COVER - REAR FINAL DRIVE	38351	■
BREATHER & HOSE - DIFFERENTIAL	38352	■
BREATHER - 4WD	38353	■
BREATHER HOSE	38354	■
DRAIN PLUG	38355	■
CVT BREATHER HOSE	38356	■
BREATHER&HOSE-COUPLING,ELECTRIC	38359	■
REAR COVER GASKET	38420	■
CASE - DIFF.	38421	■
GEAR - SIDE, DIFF. BEVEL	38423	■
WASHER - THRUST, SIDE GEAR	38424	■
PINION MATE - DIFF. BEVEL	38425	■
WASHER - THRUST, PINION MATE	38426	■
SHAFT - PINION MATE	38427	■
PIN - LOCK, PINION SHAFT	38428	■
LOCK PIN - 4WD PINION SHAFT	38429	■
BLOCK - THRUST	38430	■
DIFFERENTIAL PRESSURE RING	38431	■
DIFFERENTIAL FRICTION PLATE	38432	■
DIFFERENTIAL FRICTION DISC	38433	■
BEARING - DIFF. SIDE	38440	■
4WD RING & PINION SET	38540	■
BEARING - 4WD FRONT PINION	38541	■
BEARING - 4WD REAR PINION	38542	■
SPACER - 4WD PINION BEARING	38543	■
FLANGE - 4WD COMPANION	38545	■
4WD DIFFERENTIAL CASE	38546	■
4WD SIDE GEAR	38547	■
THRUST WASHER - 4WD SIDE GEAR	38548	■
4WD PINION MATE	38549	■
THRUST WASHER - 4WD PINION MATE	38550	■
SHAFT - 4WD PINION MATE	38551	■
BEARING - 4WD SIDE	38552	■
BOLT - 4WD DRIVE GEAR	38553	■
VISCOUS COUPLING	38760	■
COVER - 4WD REAR	40513	■
GASKET - 4WD REAR COVER	40515	■
DIFF MTNG INSULTR ASSY.	54710	■

Vehicle Components Covered	PNC	Coverage
<b>ELECTRICAL</b>		
SWIRL CONTROL VALVE	14517	■
THERMO ELEMENT KIT	16391	■
UNIT - TRANSISTOR IGN.	22020	■
HARNASS - DISTRIBUTOR	22159	■
STATOR	22163	■
PROTECTOR - DISTRIBUTOR	22172	■
ABSOLUTE PRESSURE SENSOR	22366	■
COIL - IGNITION	22433	■
RESISTOR	22460	■
PROTECTOR - IGNITION COIL	22465	■
BRACKET-ECM	22612	■
ALTERNATOR ASSY.	23100	■
ROTOR - ALTERNATOR	23108	■
BEARING - ALTERNATOR	23120	■
HOLDER & BRUSH	23133	■
PULLEY ASSY.	23150	■
REGULATOR - IC TYPE VOLTAGE	23215	■
MOTOR ASSY. - STARTER	23300	■
COIL ASSY. - FIELD	23306	■
ARMATURE ASSY.	23310	■
PINION ASSY. - CLUTCH	23312	■
GEAR - REDUCTION	23313	■
SWITCH ASSY. - MAGNETIC	23343	■
BRUSH	23380	■
HARNASS - MAIN	24010	■
HARNASS - ENGINE ROOM	24012	■
HARNASS - INSTRUMENT	24013	■
HARNASS - BODY	24014	■
HARNASS - TAIL	24015	■
HARNASS - CHASSIS	24016	■
HARNASS - CONSOLE	24030	■
HARNASS - ENGINE	24077	■
HARNASS - TAILGATE	24145	■
HARNASS - ROOM CAMP	24160	■
LINK - FUSIBLE	24161	■
HARNASS - SUN ROOF	24162	■
HARNASS - AIR BAG	24170	■
HARNASS - DOOR	24239	■
REAR WINDOW DEFROSTER	24320	■
DEFROSTER WIRING	24328	■
BREAKER - CIRCUIT	24330	■
UNIFIED METER CONTROL UNIT	24810	■
DIGITAL TEMP METER ASSY.	24835	■
COMPASS - TEMP SENSOR	24836	■
SPEEDOMETER	24850	■
TACHOMETER	24855	■
GAUGE - FUEL	24860	■
ILLUMINATION INVERTER	24871	■
ODOMETER/TRIP METER	24875	■
GAUGE - WATER TEMPERATURE	24880	■
HEAD-UP DISPLAY UNIT	24941	■
PLATE - CIRCUIT	25030	■
DISPLAY - WARNING	25041	■
WARNING DISPLAY AMPLIFIER	25065	■
O/HEAD CONSOLE SW MODULE	25111	■
UNIT-WIRELESS CHARGE	25168	■
RELAY - GLASS HATCH/BACK DOOR	25197	■
RELAY - COURTESY LAMP	25201	■
TAIL GATE RELEASE RELAY	25202	■
RELAY - HEADLAMP	25203	■
RELAY - DEFROSTER	25204	■
RELAY - HORN	25205	■
INSTRUMENT PANEL SWITCH	25210	■
RELAY - IGNITION & ACCESSORY	25215	■
RELAY ASSY. - INHIBITOR	25216	■
RELAY - AUTO LAMP	25219	■
TRUNK LID OPENER RELAY	25221	■
RELAY - HEADLAMP DIMMER	25228	■
RELAY - FOG LAMP	25229	■
RELAY - POWER WINDOW	25230	■
RELAY - A.S.C.D.	25234	■
REAR WIPER - RELAY	25236	■
RELAY - HICAS	25247	■
LAMP CHECK RELAY	25250	■
POWER SEAT RELAY	25251	■
RELAY - DAYTIME RUNNING LAMP	25253	■
RELAY - KEYLESS ENTRY CHECK	25254	■
RELAY - KEYLESS ENTRY	25255	■
RELAY - THEFT WARNING HORN	25256	■
MULTI-REMOTE CONTROL RELAY	25259	■

Vehicle Components Covered	PNC	Coverage
RELAY - ACTIVE SUSPENSION	25260	■
REAR WIPER/WASHER SWITCH	25262	■
RELAY - ANTI-THEFT	25263	■
RELAY - ASCD HOLD	25264	■
RELAY - TCS	25265	■
CORNERING LAMP RELAY	25266	■
RELAY- TAIL LAMP	25268	■
RELAY - HEADLAMP DAYTIME	25269	■
THEFT WARNING LAMP RELAY	25272	■
HID RELAY	25275	■
RELAY - N & P	25276	■
POWER SOCKET RELAY	25277	■
CONTROL - ILLUMINATION	25280	■
AUTO-DOOR ON-OFF SWITCH	25290	■
BACK DOOR SWITCH	25292	■
WALK IN MOTOR RELAY	25293	■
AFS RELAY	25295	■
TRAILER TOW POWER RELAY	25296	■
TRAILER TOW TURN SIGNAL RELAY	25297	■
AFS CONTROL UNIT ASSY.	25300	■
SWITCH ASSY-METER DISPLAY	25301	■
SWITCH ASSY. - DRIVE POSITION	25315	■
SWITCH - ASCD CLUTCH	25323	■
SWITCH - STOP (A.S.C.D.)	25324	■
SWITCH - MAIN, 120V	25329	■
LIGHTER - CIGARETTE	25330	■
OUTLET - 120V	25331	■
POWER SOCKET ASSY.	25332	■
RELAY-MOTOR CONTROL	25338	■
RELAY-OFF,STOP LAMP	25339	■
SWITCH - REAR WINDOW DEFROSTER	25340	■
POWER REAR WINDOW SWITCH	25343	■
SWITCH-SUNROOF SHADE SLIDE	25351	■
SWITCH - DOOR	25360	■
SWITCH ASSY. - DOOR LOCK	25361	■
SWITCH - BACK DOOR	25363	■
SWITCH ASSY. - BACK DOOR UNLOCK	25364	■
FOG LAMP SWITCH	25370	■
REAR HATCH OPENER SWITCH	25380	■
BOARD COMPUTER SWITCH	25381	■
TRUNK OPENER SWITCH	25382	■
SWITCH - TRUNK LID OPENER	25384	■
REAR SUNSHADE SWITCH ASSY.	25388	■
SWITCH - DOOR, LOCK/UNLOCK	25400	■
SWITCH - INTERLOCK EMERGENCY	25401	■
POWER WINDOW CONTROL UNIT	25404	■
FUSE BLOCK	25410	■

ELECTRICAL CONTINUED		PNC	Coverage
Vehicle Components Covered			
AIR BAG PRESSURE DETECT MODULE	86509	■	
MOTOR ASSY-SLIDE	86911	■	
FRONT POWER SEAT HARNESS	87019	■	
SIDE AIR BAG HARNESS	87020	■	
SEAT HEATER ELEMENT/THERMOSTAT	87345	■	
SLIDE, LIFT SWITCH	87352	■	
BACK DOOR OPENER ACTUATOR	90550	■	
BACK DOOR CLOSURE MOTOR	90554	■	
TRUNK/BACK DOOR INTELL KEY SWITCH	90605	■	
ASCD VACUUM TANK	92260	■	
PUMP - VACUUM A.S.C.D.	92270	■	
DOOR MIRROR CONTROL UNIT	96312	■	
ASSIST AIR BAG MODULE	98515	■	
MODULE - AIR BAG	98520	■	
CURTAIN AIR BAG MODULE	98521	■	
SENSOR - AIR BAG	98581	■	
PEDAL POSITION CONTROL UNIT	98700	■	
SIDE AIR BAG MODULE	98830	■	
SIDE AIR BAG SIDE SENSOR	98831	■	
MODULE ASSY-SIDE AIR BAG RR	98832	■	
MODULE ASSY-CENTER AIR BAG,FRONT	98833	■	
AIR BAG ON/OFF SWITCH ASSY	98840	■	
AIR BAG ON/OFF SWITCH HARNESS	98841	■	
SEAT BELT CONTROL UNIT ASSY	98845	■	
HARNESS-SEAT	98854	■	
<b>ENGINE</b>			
ENGINE - BARE <sup>1</sup>	10102	■	
SHORT ENGINE ASSY. <sup>1</sup>	10103	■	
BLOCK - CYLINDER	11010	■	
CYLINDER BLOCK WELCH PLUG	11021	■	
PLUG GASKET	11026	■	
INSULATOR-INTAKE PORT	11040	■	
HEAD ASSY. - CYLINDER	11041	■	
GASKET - CYLINDER HEAD	11044	■	
COVER - CYLINDER HEAD FRONT/REAR	11046	■	
CYLINDER HEAD WELCH PLUG	11051	■	
BOLT - CYLINDER HEAD	11056	■	
OUTLET - WATER	11060	■	
HOUSING - THERMOSTAT	11061	■	
WATER OUTLET GASKET	11062	■	
CYLINDER BLOCK WATER OUTLET	11063	■	
GASKET - THERMOSTAT HOUSING	11072	■	
SPARK PLUG TUBE	11095	■	
SEAT - INTAKE VALVE	11098	■	
SEAT - EXHAUST VALVE	11099	■	
PAN - OIL	11110	■	
COVER - OIL PAN BOTTOM	11115	■	
GASKET - OIL PAN	11121	■	
PLUG - OIL PAN DRAIN	11128	■	
GAUGE - OIL LEVEL	11140	■	
RH ENG MOUNT INSULATOR	11175	■	
LH ENG MOUNT INSULATOR	11215	■	
INSULATOR - ENGINE MOUNT, FRONT	11220	■	
RH ENG MOUNT BRACKET	11229	■	
BRACKET - ENGINE MOUNT, FRONT	11232	■	
CENTER MEMBER	11240	■	
ENGINE DAMPER ASSY.	11246	■	
GUSSET	11262	■	
ENG MOUNT ACTUATOR ASSY.	11273	■	
MODULE-CONTROL,ENGINE MOUNT	11280	■	
INSULATOR - ENGINE MOUNT, REAR	11320	■	
BRACKET -REAR MOTOR MOUNT,RH	11336	■	
BRACKET - ENGINE MOUNT, REAR	11340	■	
ACTUATOR-TORQUE ROD	11353	■	
LH ENG MOUNT BRACKET	11355	■	
BUFFER	11390	■	
ALTERNATOR BRACKET	11710	■	
ALTERNATOR ADJUSTING BAR	11715	■	
DRIVE BELT TENSIONER	11716	■	
P/S PUMP BELT TENSIONER	11717	■	
DRIVE BELT	11720	■	
BELT - TIMING	11721	■	
SERPENTINE BELT TENSIONER	11750	■	
VALVE - PC.V.	11810	■	
VENTILATION HOSE	11828	■	
PULLEY - IDLER	11925	■	
BRACKET - IDLER PULLEY (FOR P/STRG PUMP)	11935	■	
BRACKET - OIL PUMP	11940	■	
BAR - OIL PUMP ADJUSTING	11945	■	
SERPENTINE BELT TENSIONER BRKT	11972	■	
PISTON & PIN	12010	■	

Vehicle Components Covered		PNC	Coverage
RING - PISTON	12033	■	
ROD & CAP - CONNECTING	12100	■	
BEARING - CONNECTING ROD	12111	■	
PISTON OIL JET	12121	■	
ACTUATOR ASSY-VCR	12130	■	
HOLDER-VCR PIN	12144	■	
PIN-VCR ACTUATOR	12145	■	
CRANKSHAFT	12200	■	
BEARING - MAIN	12207	■	
SEAL - CRANKSHAFT OIL	12279	■	
PULLEY - CRANKSHAFT	12303	■	
BOLT - FIXING (CRANK PULLEY)	12309	■	
FLYWHEEL ASSY.	12310	■	
FLYWHEEL RING GEAR	12312	■	
CAMSHAFT	13001	■	
GEAR - CRANKSHAFT	13021	■	
GEAR - CAMSHAFT	13024	■	
VTC SPROCKET ASSY.	13025	■	
CHAIN - TIMING	13028	■	
COVER - ENGINE FRONT	13035	■	
VTC CIVER ASSY.	13041	■	
SEAL - OIL, CRANKSHAFT FRONT/REAR	13042	■	
SEAL - CAMSHAFT OIL	13043	■	
GASKET - DUST COVER	13044	■	
WL LADDER ASSY.	13045	■	
SEAL-VTC SPROKET	13046	■	
INLET - WATER	13049	■	
LIFTER GUIDE	13051	■	
OIL PUMP CHAIN TENSIONER	13054	■	
SIGNAL PLATE-EXHAUST CAMSHAFT	13064	■	
SIGNAL PLATE-INTAKE CAMSHAFT	13065	■	
TENSIONER - CHAIN	13070	■	
JET - TIMING CHAIN OIL	13081	■	
GUIDE - CHAIN TENSIONER SIDE	13085	■	
SENSOR-TRIGGER	13093	■	
VALVE - INTAKE	13201	■	
VALVE - EXHAUST	13202	■	
VALVE - SPRING	13203	■	
SEAT - VALVE SPRING	13205	■	
SEAT - VALVE OIL	13207	■	
RETAINER - VALVE SPRING	13209	■	
GUIDE - VALVE	13212	■	
SHIM - VALVE	13229	■	
LIFTER - VALVE (OHV ENGINE ONLY)	13231	■	
VALVE ROCKER PIVOT	13234	■	
SHAFT - ROCKER	13252	■	
ARM - VALVE ROCKER	13257	■	
COVER ASSY. - VALVE ROCKER	13264	■	
GASKET - VALVE ROCKER COVER	13270	■	
TIMING CHAIN REAR COVER	13500	■	
GASKET - FRONT/REAR COVER	13520	■	
COVER - FRONT DUST	13560	■	
MANIFOLD - INTAKE	14001	■	
MANIFOLD - EXHAUST	14004	■	
CAP BOLT & STUD	14006	■	
LOWER MANIFOLD COLLECTOR	14011	■	
EXHAUST MANIFOLD CONNECTOR	14012	■	
COLLECTOR - INTAKE MANIFOLD	14013	■	
SUPPORT - INTAKE MANIFOLD	14018	■	
GASKET - MANIFOLD	14035	■	
INTAKE ADAPTER	14040	■	
WATER CONNECTOR	14054	■	
WATER BY-PASS HOSE	14055	■	
HOSE-EGR WATER	14058	■	
TUBE-EGR WATER	14075	■	
GASKET - COLLECTOR	14080	■	
THROTTLE BODY WATER HOSE	14083	■	
HOSE ASSY-WATER PUMP,EGR	14085	■	
HOSE ASSY-INLET,EGR COOLER	14086	■	
HOSE ASST-OUTLET,EGR COOLER	14087	■	
EXHAUST MANIFOLD COVER	14091	■	
HEAT SHROUD	14096	■	
PUMP ASSY - WATER, INTER COOLER COOLING	14407	■	
BRACKET-SUPPORT	14449	■	
TUBE & HOSE - INLET	14460	■	
VIAS CONTROL VALVE ASSY.	14518	■	
EGR VALVE SPACER	14717	■	
SENSOR - EXHAUST GAS TEMP.	14730	■	
VALVE - B.P.T. (BACK PRES. TRANSDUCER)	14741	■	
EAI UNIT	14810	■	
EAI PIPE	14823	■	

Vehicle Components Covered		PNC	Coverage
AB VALVE	14835	■	
AIR INDUCTION HOSE	14860	■	
VALVE - "VACUUM CUT VALVE" BYPASS	14933	■	
VALVE - EVAP,CANISTER VENT CONTROL	14935	■	
SERVICE PORT - EVAP	14939	■	
SOLENOID VALVE - CAMSHAFT	14948	■	
CANISTER - CARBON	14950	■	
VALVE - E.G.R. SOLENOID	14954	■	
VALVE - A/V CONTROL SOLENOID	14956	■	
VALVE - MAP/BARO SWITCH SOLENOID	14962	■	
PUMP ASSY. - OIL	15010	■	
GASKET - OIL PUMP	15025	■	
CHAIN - OIL PUMP DRIVE	15041	■	
GEAR - OIL PUMP CRANK	15043	■	
GEAR - OIL PUMP DRIVE	15044	■	
STRAINER - OIL	15050	■	
GUIDE - OIL PUMP CHAIN	15073	■	
GUIDE - LOWER OIL PUMP CHAIN	15074	■	
VALVE - OIL PUMP REGULATOR	15132	■	
REGULATOR-OIL TEMPERATURE	15136	■	
TUBE - DIPSTICK	15155	■	
BRACKET - OIL FILTER	15238	■	
GASKET - OIL FILTER BRACKET	15239	■	
VALVE - UNIT RELIEF	15241	■	
CAP - OIL FILLER	15255	■	
VALVE - OIL FILTER REGULATOR	15300	■	
TERMINAL - ACCELERATOR WIRE	16361	■	
WIRE - THROTTLE (PUMP TO TERMINAL)	16362	■	
CLEANER ASSY. - AIR	24428	■	
GASKET & AIR CLEANER INSULATOR	16523	■	
DUCT ASSY-AIR DUCT SIDE	16854	■	
PULLEY ASSY.- TENSION	16805	■	
OIL TEMP SENSOR	16970	■	
MODULE - FUEL PUMP CONTROL	17001	■	
CHAMBER - THROTTLE, EFI/ECCS	17118	■	
HOSE-BYPASS	18264	■	
EXHAUST ACTUATOR ASSY.	20130	■	
EXHAUST ACTUATOR CONNECTOR	20132	■	
FRONT TUBE INSULATOR	20510	■	
CONVERTER GASKET	20712	■	
EXHAUST MANIFOLD W/CATALYTIC CNVTR	20801	■	
PUMP ASSY. - WATER	21010	■	
GASKET - WATER PUMP	21014	■	
FAN PULLEY BRACKET	21046	■	
CONNECTOR-WATER OUTLET	21050	■	
PULLEY - FAN & WATER PUMP	21051	■	
COOLING FAN DRIVE PUMP	21052	■	
BLADE - FAN	21060	■	
MOTOR & FAN ASSY (WITH SHROUD)	21066	■	
COUPLING ASSY. - FAN	21082	■	
THERMOSTAT	21200	■	
OIL COOLER PIPE/HOSE - FIN TYPE	21302	■	
ENGINE OIL COOLER ASSY. - FIN TYPE	21305	■	
FAN OIL COOLER ASSY.	21309	■	
ENG OIL COOLER GASKET	21310	■	
OIL COOLER WATER HOSE	21380	■	
RADIATOR ASSY.	21400	■	
CAP - RADIATOR	21430	■	
AIR INTAKE GUIDE	21468	■	
SHROUD ASSY. - RADIATOR	21475	■	
COCK - RADIATOR DRAIN	21480	■	
FAN CONTROL MODULE	21493	■	
UPPER RADIATOR HOSE	21501	■	
LOWER RADIATOR HOSE	21503	■	
TANK - RESERVOIR	21510	■	
BRACKET - RESERVOIR TANK	21511	■	
RESERVOIR TANK HOSE	21515	■	
WATER HOSE ASSY - INLET, AIR COOLER	21518	■	
WATER HOSE ASSY - OUTLET, AIR COOLER	21520	■	
SWITCH - WATER TEMP (FOR COOLING FAN)	21595	■	
RADIATOR FAN MOTOR	21597	■	
HUB - FRONT ROAD WHEEL	40202	■	
4WD DRIVE SHAFT BEARING	40213	■	
BEARING	40215	■	
BOLT - FRONT HUB	40222	■	
SIDE SHAFT GREASE SEAL	40227	■	
FRONT BEARING DUST SEAL	40228	■	
SEAL - GREASE	40232	■	
NUT - LOCK	40262	■	
REAR AXLE HOUSING	43010	■	
HOUSING - REAR AXLE (MULTI-LINK)	43018	■	
BUSHING ASSY. - AXLE HOUSING	43052	■	
HUB - REAR WHEEL	43204	■	

ENGINE CONTINUED		PNC	Coverage
Vehicle Components Covered			
REGULATOR - PRESSURE	22670	■	
METER - AIR FLOW	22680	■	
BRACKET - AIR FLOW METER	22682	■	
AIR/FUEL RATIO SENSOR	22689	■	
SENSOR - FRONT EXHAUST GAS (O2)	22690	■	
SENSOR - REAR EXHAUST GAS (O2)	22691	■	
RESISTOR - DROPPING	22695	■	
RELAY - ECC/EFI	22696	■	
RELAY - FUEL PUMP	22697	■	
FUEL DROPPING RESISTOR	22698	■	
SENSOR - CRANK ANGLE	23730	■	
CRANKSHAFT POSITION SENSOR (OBD POS)	23731	■	
CRANKSHAFT POSITION SENSOR (REF)	23732	■	
RING GEAR SENSOR ASSY.	23733	■	
INT VALVE TIMING CONT POS SENSOR	23734	■	
SENSOR-IDLE STOP	23737	■	
VVLACTUATOR ASSY.	23745	■	
VEL CONTROL MODULE	23751	■	
MOTOR ASSY - ACTUATOR	23753	■	
CONTROL UNIT-ELECTRIC VALVE TIMING	23754	■	
VTC-ELECTRIC	23756	■	
MODULE-VCR CONTROL	23780	■	
VALVE - A.A.C.	23781	■	
THROTTLE CONTROL UNIT - TCS	23790	■	
SOLENOID ASSY. - VTC	23796	■	
HARNES/SUBHARNES - EFI	24011	■	
ENGINE SUB HARNESS	24079	■	
RELAY - ALT."L"	24336	■	
TRAY - BATTERY	24428	■	
UNIT - WATER TEMPERATURE GAUGE	25080	■	
ENGINE START SWITCH ASSY.	25150	■	
THROTTLE MOTOR RELAY	25171	■	
RELAY - RADIATOR COOLING FAN	25217	■	
OIL PRESSURE SENDING UNIT	25240	■	
RELAY - STARTER	25243	■	
SWITCH - OIL PRESSURE (WITHOUT GAUGE)	25244	■	
COOLING FAN CONTROLLER	25305	■	
COOLING FAN SPEED CONTROL SOLENOID VALVE	25405	■	
CONTROL UNIT-VOLTAGE STABILIZER	29220	■	
HARNES BATTERY FRONT PROTECT	29516	■	
<b>FRONT/REAR SUSPENSION</b>			
SWITCH - HEIGHT CONTROL	25105	■	
SWITCH - ADJ./SONAR SUSPENSION	25140	■	
UNIT - CONTROL ADJ./SONAR SUSPENSION	25963	■	
NOISE SUPPRESSOR COIL	28363	■	
SENSOR - STEERING ANGLE	28476	■	
AIR SUSPENSION CONTROL ASSY.	28581	■	
INCLINE ANGLE SENSOR ASSY.	31955	■	
BEARING - CENTER	37520	■	
SHAFT ASSY. - REAR AXLE	38162	■	
NUT - REAR AXLE SHAFT LOCK	38163	■	
FRONT DRIVE FLANGE	38512	■	
4WD FRONT DRIVE SHAFT	38519	■	
FRONT DRIVE SHAFT ASSY.	39100	■	
DUST SHIELD	39252	■	
SHAFT ASSY. - DRIVE	39600	■	
RACE - SPIDER ASSY.W/ BRG (DIFF. SIDE)	39625	■	
BOOT - RUBBER	39655	■	
SLIDE JOINT HOUSING	39714	■	
SLIDE JOINT SPIDER ASSY.	39720	■	
SPINDLE - KNUCKLE	40014	■	
PIN - KING	40022	■	
BEARING - KING PIN	40030	■	
BOLT - STEERING STOPPER	40038	■	
ARM - KNUCKLE	40052	■	
BOOT - DRIVE SHAFT	40088	■	
UPPER BALL JOINT	40110	■	
BALL JOINT	40160	■	
SEAT - LOWER BALL JOINT	40173	■	
HUB - FRONT ROAD WHEEL	40202	■	
4WD DRIVE SHAFT BEARING	40213	■	
BEARING	40215	■	
BOLT - FRONT HUB	40222	■	
SIDE SHAFT GREASE SEAL	40227	■	
FRONT BEARING DUST SEAL	40228	■	
SEAL - GREASE	40232	■	
NUT - LOCK	40262	■	
REAR AXLE HOUSING	43010	■	
HOUSING - REAR AXLE (MULTI-LINK)	43018	■	
BUSHING ASSY. - AXLE HOUSING	43052	■	
HUB - REAR WHEEL	43204	■	

Vehicle Components Covered		PNC	Coverage
FLANGE - REAR AXLE COMPANION	43213	■	
BEARING - REAR AXLE	43215	■	
BOLT - REAR HUB	43222	■	
SEAL - GREASE, REAR HUB	43232	■	
SEAL - REAR AXLE SHAFT OIL	43252	■	
LOCK NUT	43262	■	
ACTUATOR ASSY. - CONTROL	52102	■	
JOINT ASSY. - FRONT	52110	■	
FILTER ASSY. - AIR FRONT	52140	■	
SEAT - INSULATOR CAP	52147	■	
CLIP - INSULATOR CAP	52149	■	
ACTUATOR ASSY. - REAR	52152	■	
JOINT ASSY. - REAR	52160	■	
SEAT - REAR JOINT	52162	■	
VALVE COMPL. - FRONT CONTROL	52200	■	
ACCUMULATOR ASSY. - FRONT	52240	■	
ACCUMULATOR ASSY. - LH,FR	52241	■	
ACCUMULATOR ASSY. - LH,RR	52242	■	
ACCUMULATOR ASSY. - RH,FR	52243	■	
VALVE COMPL. - REAR CONTROL	52250	■	
ACCUMULATOR ASSY. - REAR	52290	■	
VALVE ASSY. - MULTI	52300	■	
FILTER COMPL. - DRAIN	52360	■	
TANK ASSY. - OIL	52400	■	
COOLER ASSY. - OIL	52421	■	
MOTOR FAN	52431	■	
ACCUMULATOR - PUMP	52470	■	
TUBE & HOSE - FRONT ACTUATOR	52500	■	
TUBE ASSY. - REAR ACTUATOR	52502	■	
TUBE - DRAIN FRONT	52541	■	
TUBE - DRAIN REAR	52543	■	
TUBE & HOSE - FRONT CROSS	52600	■	
TUBE ASSY. - ACTIVE SUSP.FRONT	52640</		

STEERING SYSTEM CONTINUED		PNC	Coverage
SHAFT ASSY. - STEERING COLUMN	48820	■	
SHAFT - UPPER COLUMN	48821	■	
LOWER COLUMN SHAFT ASSY.	48822	■	
STEERING COLUMN LOWER SHAFT	48823	■	
JACK TUBE & CLAMP ASSY.	48850	■	
JACKET TUBE ASSY.	48860	■	
UPPER JACKET TUBE	48861	■	
HOLE COVER ASSY.	48950	■	
HOLE COVER INSULATOR BRACKET	48958	■	
STEERING COLUMN CLAMP	48960	■	
JOINT COVER	48967	■	
LEVER - TILT	48970	■	
TILT MOTOR ASSY.	48990	■	
TELESCOPIC MOTOR ASSY.	48991	■	
TILT SENSOR ASSY.	48992	■	
TELESCOPIC SENSOR ASSY.	48993	■	
RACK & PINION ASSY.	49001	■	
PUMP ASSY. - OIL, POWER STEERING	49110	■	
TANK - RESERVOIR/PUMP - POWER STRG.	49115	■	
CAP - OIL PUMP	49181	■	
OIL PUMP FILTER	49182	■	
TANK COVER - OIL PUMP	49185	■	
SEAL - OIL, PINION	49226	■	
PACKING - RACK	49297	■	
SEAL - OIL, STUB SHAFT	49365	■	
BUSH ASSY. - RACK	49522	■	
O-RING	49525	■	
TUBE - CYLINDER	49541	■	
POWER STEERING HOSE & TUBE SET	49710	■	
PRESSURE TUBE ASSY.	49716	■	
HOSE ASSY-SUSTION, POWER STEERING	49717	■	
TUBE ASSY-POWER STEERING	49719	■	
TUBE & HOSE ASSY. (STRG. GEAR TO PUMP)	49720	■	
POWER STEERING OIL COOLER	49721	■	
POWER STEERING HOSE & TUBE	49722	■	
HOSE-RETURN, POWER STEERING	49724	■	
POWER STEERING RETURN HOSE	49725	■	
BREATHER TUBE	49731	■	
SWITCH - OIL PRESSURE	49761	■	
AIR CONTROL VALVE	49762	■	
VALVE - FLOW CONTROL	49810	■	
PRESSURE CONTROL VALVE ASSY.	49836	■	
COMPRESSION ROD	54468	■	
REAR AXLE BALL JOINT ASSY.	55154	■	
HICAS ELECT CYL ASSY.	55705	■	
HICAS POWER CYLINDER ASSY.	55710	■	
HICAS MOTOR ASSY.	55740	■	
MAIN POSITION SENSOR-HICAS	55741	■	
REAR PRESSURE HOSE & TUBE SET	55750	■	
CUT OFF VALVE ASSY.	55780	■	
VARIABLE RATIO STRG CONTROL	285H0	■	

**TRANSMISSION**

DAMPER ASSY -DYNAMIC	11375	■
BOLT - FIXING (FLYWHEEL)	12315	■
PLATE ASSY. - DRIVE	12331	■
OIL FILLER TUBE	15259	■
A/T OIL COOLER ASSY.	21606	■
WARMER ASSY-A/T OIL	21608	■
TUBE ASSY. - OIL COOLER	21619	■
TUBE ASSY	21620	■
TUBE - OIL COOLER	21621	■
OIL COOLER HOSE	21631	■
RESISTOR - DROPPING (A/T CONT)	22693	■
POWER SHIFT SWITCH	25127	■
DRIVE CHAIN SWITCH ASSY.	25129	■
OVERDRIVE CANCEL SWITCH	25130	■
SHIFT PTRN SELECT SW	25131	■
SHIFT LOCK RELAY	25206	■
RELAY-CVT	25239	■
TRANSFER MOTOR RELAY	25249	■
SWITCH - KICKDOWN	25390	■
SWITCH - CLUTCH INTERLOCK	25402	■
DIFF LOCK SWITCH	25535	■
SWITCH - SHIFT (4WD)	25536	■
4WD SHIFT SWITCH	25538	■
A/T STEERING SWITCH	25549	■
CONTROLLER ASSY. - SELECT LOCK	28491	■
TRANSFER CONTROL UNIT	28495	■
MOTOR ASSY. - TRACTION	29010	■
CLUTCH COVER ASSY.	30210	■
CLUTCH HOUSING	30400	■

Vehicle Components Covered	PNC	Coverage
SLEEVE - CLUTCH RELEASE	30501	■
BEARING - CLUTCH RELEASE	30502	■
LEVER - CLUTCH WITHDRAWAL	30531	■
PIN - WITHDRAWAL LEVER	30537	■
CLUTCH DAMPER	30600	■
RESERVOIR TANK	30609	■
CLUTCH MASTER CYLINDER	30610	■
CYLINDER ASSY-CENTRIC SLAVE	30619	■
CLUTCH OPERATING CYLINDER	30620	■
BLEEDER	30621	■
PUSH ROD	30628	■
FLUID FILLER TUBE	30645	■
CLUTCH TUBES & HOSES	30650	■
CLUTCH ORIFICE ASSY.	30652	■
BRANCH CONNECTOR	30656	■
CABLE - CLUTCH OPERATING	30670	■
BOLT - SELF LOCK CONVERTER	31009	■
TRANSMISSION ASSY. <sup>1</sup>	31020	■
AUTO T/YM CONTROL UNIT	31036	■
SWITCH - OVERDRIVE INDICATOR	31041	■
CABLE - THROTTLE	31051	■
OIL LEVEL GAUGE & PIPE	31080	■
CONVERTER ASSY- TORQUE	31100	■
CONVERTER HOUSING	31301	■
CONVERTER HOUSING GASKET	31309	■
CASE - TRANSMISSION	31310	■
CASE - OVERDRIVE	31322	■
EXTENSION/ADAPTER ASSY.	31330	■
GASKET - REAR EXTENSION	31335	■
SEAL EXTENSION ADAPTOR - OIL	31336	■
PUMP ASSY. - OIL	31340	■
HOUSING - OIL PUMP, SUB	31342	■
SEAL - FRONT OIL	31343	■
SEAL - OIL, OIL PUMP HOUSING	31344	■
ROTOR SET - OIL PUMP	31345	■
OIL PUMP ASSY. - ELECTRICAL	31347	■
GASKET - OIL PUMP	31366	■
BEARING RETAINER	31370	■
SEAL ASSY. - OIL	31375	■
BREATHER - AIR	31381	■
DRUM SUPPORT	31385	■
PAN ASSY. - OIL	31390	■
SIDE COVER	31391	■
SIDE COVER GASKET	31396	■
GASKET - OIL PAN	31397	■
SEALS - ALL INTERNAL A/T	31398	■
SHAFT - INPUT	31411	■
SHAFT - INTERMEDIATE	31416	■
CARRIER ASSY. - FRONT PLANET	31420	■
BEARING - NEEDLE THRUST	31428	■
GEAR - INTERNAL	31431	■
CARRIER ASSY. - REAR PLATE	31440	■
GEAR ASSY. - SUN	31460	■
CLUTCH ASSY. - ONE WAY	31473	■
HUB - FORWARD CLUTCH	31475	■
SHAFT ASSY. - OUTPUT	31480	■
DISTRIBUTOR ASSY. - OIL/GEAR PARKING	31486	■
IDLER GEAR	31493	■
CLUTCH ASSY. - DIRECT	31505	■
CLUTCH ASSY. - FRONT/REVERSE	31510	■
DRUM - REVERSE CLUTCH	31512	■
PISTON - FRONT CLUTCH	31513	■
CLUTCH ASSY. - REVERSE	31515	■
FLANGE - PRESS	31519	■
RETURN ASSY. - SPRING	31521	■
O-RING TORQUE CONVERTER	31525	■
PLATE ASSY. - DRIVE	31532	■
PLATE - DRIVEN	31536	■
REAR/HIGH CLUTCH ASSY.	31540	■
DRUM - HIGH CLUTCH	31541	■
DRUM ASSY. - REAR CLUTCH	31543	■
CLUTCH ASSY. - HIGH	31545	■
HUB - HIGH CLUTCH	31550	■
HUB ASSY. - REAR CLUTCH	31551	■
CLUTCH ASSY. - FORWARD	31570	■
DRUM ASSY. - FORWARD CLUTCH	31571	■
OVERDRIVE PLANETARY CARRIER	31580	■
HUB - OVERRUN CLUTCH	31591	■
CLUTCH ASSY. - OVERRUN	31595	■
PISTON - BAND SERVO	31615	■
BAND ASSY. - BRAKE	31630	■

Vehicle Components Covered	PNC	Coverage
PISTON - LOW/REVERSE BRAKE	31645	■
BRAKE ASSY. - LOW & REVERSE	31650	■
ACCUMULATOR	31671	■
PINION - SPEEDOMETER	31703	■
VALVE ASSY. - CONTROL	31705	■
OIL STRAINER	31728	■
GOVERNOR ASSY.	31860	■
CASE & GEAR - A/T SPEEDOMETER	31883	■
LEVER - RANGE SELECTOR	31913	■
SEAL - GASKET & O-RING	31916	■
SWITCH ASSY. - INHIBITOR	31918	■
SHAFT ASSY. - MANUAL	31921	■
PLATE ASSY. - MANUAL	31924	■
SENSOR ASSY. - SECONDARY SPEED	31930	■
VACUUM DIAPHRAGM	31931	■
O-RING SEAL	31933	■
REVOLUTION SENSOR	31935	■
TURBINE REVOLUTION SENSOR	31936	■
SENSOR ASSY. - PRIMARY SPEED	31938	■
SOLENOID ASSY. CONTROL	31939	■
DOWNSHIFT SOLENOID	31941	■
SOLENOID - LOCKUP	31942	■
SHIFT SOLENOID A	31943	■
SHIFT SOLENOID B	31944	■
SOLENOID - OVERDRIVE CANCEL	31945	■
SOLENOID - LINE PRESSURE	31946	■
SOLENOID - OVERRUNNING CLUTCH	31947	■
SENSOR ASSY-TRANSFER TEMP	31954	■
LOW TEMPERATURE SENSOR	31958	■
ROD ASSY. - PARKING	31970	■
SHAFT ASSY. - PARKING PAWL	31986	■
SWITCH - COMPLETE, ATP	32003	■
SWITCH - COMPLETE, NEUTRAL	32004	■
SWITCH - REVERSE LAMP	32005	■
DOWEL PIN	32006	■
DIFFERENTIAL LOCK ACTUATOR SWITCH	32009	■
MANUAL TRANSAXLE ASSY. <sup>1</sup>	32010	■
TRANSAXLE CASE	32100	■
DRAIN PLUG	32103	■
FILLER PLUG	32105	■
OIL GUIDE/GUTTER	32107	■
OIL GUTTER	32108	■
TRANSMISSION MAGNET	32109	■
TRANSMISSION FRONT COVER ASSY.	32110	■
FRONT COVER GASKET	32112	■
FRONT COVER OIL SEAL	32113	■
CASE COVER	32129	■
REAR EXTENSION ASSY.	32130	■
BREATHER	32131	■
REAR EXTENSION OIL GUTTER	32132	■
BEARING - EXTENSION, REAR	32133	■
YOKE SLEEVE DUST COVER	32135	■
REAR EXTENSION OIL SEAL	32136	■
ADAPTER PLATE	32137	■
BEARING RETAINER	32139	■
EXTENSION UPPER COVER	32142	■
EXTENSION UPPER COVER GASKET	32143	■
BAFFLE PLATE	32150	■
MAIN DRIVE SHAFT GEAR ASSY.	32200	■
BEARING - PILOT	32202	■
MAIN DRIVE BEARING	32203	■
SNAP RING	32204	■
OUTPUT BEARING	32205	■
COUNTER SHAFT	32211	■
INPUT SHAFT	32213	■
3RD MAIN GEAR	32215	■
4TH MAIN GEAR	32218	■
BEARING - INPUT SHAFT	32219	■
REVERSE COUNTER GEAR	32220	■
PILOT BEARING SPACER	32221	■
COUNTER SHAFT RR THRUST WASHER	32225	■
GEAR - 1ST MAIN	32230	■
MAINSHAFT	32241	■
GEAR - REVERSE MAIN	32245	■
REVERSE IDLER THRUST WASHER	32249	■
GEAR - 2ND MAIN	32250	■
3RD COUNTER GEAR ASSY.	32259	■
GEAR - 3RD MAIN	32260	■
INPUT SHAFT - 3RD GEAR	32261	■
GEAR BUSHING	32262	■
4TH COUNTER GEAR ASSY.	32263	■

TRANSMISSION CONTINUED	PNC	Coverage
VEHICLE COMPONENTS COVERED		
NEEDLE BEARING	32264	■
GEAR - 4TH MAIN	32270	■
INPUT SHAFT - 4TH GEAR	32271	■
BEARING - MAINSHAFT	32273	■
COUNTER GEAR BUSHING	32275	■
COUNTER GEAR NEEDLE BEARING	32276	■
REVERSE IDLER SHAFT	32281	■
GEAR - REVERSE IDLER	32282	■
REVERSE IDLER GEAR BEARING	32283	■
HUB & SLEEVE SET	32300	■
GEAR - 5TH INPUT	32310	■
COUNTER SHAFT END BEARING	32319	■
MAIN SHAFT BEARING	32339	■
GEAR - 5TH MAIN	32340	■
6TH MAIN GEAR ASSY.	32341	■
C RING HOLDER	32351	■
SYNCHRONIZER HUB	32601	■
SPREAD RING	32603	■
BAULK RING	32605	■
COUPLING SLEEVE	32606	■
SHIFTING INSERT	32609	■
REVERSE BAULK RING	32617	■
SYNCHRONIZER ASSY.	32620	■
1ST BAULK RING	32680	■
2ND BAULK RING	32681	■
3RD BAULK RING	32682	■
4TH BAULK RING	32683	■
5TH BAULK RING	32684	■
SPEEDO DRIVE GEAR	32701	■
ASSY. - SPEEDOMETER PINION	32702	■
SPEEDO PINION ASSY.	32703	■
FORK ROD	32801	■
FORK SHAFT BUSHING	32803	■
SHIFT FORK	32805	■
RING STOPPER	32812	■
ROD BRACKET	32813	■
INTERLOCK PIN	32815	■
INTERLOCK PLUNGER	32817	■
SWITCH PLUNGER	32827	■
CHECK BALL	32828	■
CHECK BALL AND SPRING	32829	■
CHECK BALL PLUG	32834	■
CONTROL LEVER ASSY.	32840	■
CONTROL LEVER	32841	■
LOW/HIGH CONTROL LEVER	32847	■
PLUNGER	32851	■
SELECT CHECK SPRING	32852	■
RETURN SPRING PLUG	32854	■
RETURN SPRING	32855	■
CONTROL ROD SHAFT OIL SEAL	32857	■
SEAL - OIL CONTROL	32858	■
CONTROL ROD BOOT	32859	■
CONTROL LEVER HOUSING ASSY.	32868	■
CONTROL ROD BRACKET	32881	■
STRIKING ROD	32892	■
STRIKING LEVER	32895	■
LEVER ASSY. - STRIKING	32897	■
SLIDE BALL BEARING	32898	■
TRANSFER ASSY.	33000	■
REAR CASE	33103	■
CASE ASSY. - REAR, TRANSFER	33104	■
CASE - CENTER TRANSFER	33105	■
CASE - FRONT TRANSFER	33107	■
BAFFLE PLATE	33108	■
MAIN SHAFT OIL SEAL	33111	■
DRIVESHAFT OIL SEAL	33114	■
BEARING - BALL, INPUT	33116	■
COVER - FRONT TRANSFER	33117	■
END COVER	33119	■
MAIN SHAFT NEEDLE BEARING	33125	■
SLEEVE - COUPLING, LOW & HIGH	33130	■
SHAFT - MAIN	33131	■
FRONT DRIVE SPOCKET	33134	■
FR/RR DRIVE SHAFT BEARING	33135	■
BEARING - RADIAL NEEDLE	33136	■
BEARING - NEEDLE PILOT	33137	■
MAIN SHAFT	33138	■
BEARING - BALL, OUTPUT	33139	■
REAR CASE OIL SEAL	33142	■
SEAL - OIL, REAR CASE	33145	■
OIL COVER	33146	■

Vehicle Components Covered	PNC	Coverage
REAR OIL GUTTER	33149	■
SHAFT - FRONT DRIVE	33151	■
COUPLING, 2WD & 4WD	33153	■
CHAIN - TRANSFER	33155	■
ROD ASSY. - SHIFT	33166	■
SHIFT SHAFT OIL SEAL	33185	■
TRANSFER CONTROL LEVER	33210	■
FLANGE ASSY. - COMPANION	33211	■
SEAL - OIL, FRONT DRIVE	33217	■
REAR COMPANION FLANGE ASSY.	33220	■
ACTUATOR-SHIFT, TRANSMISSION	33253	■
PLUG - DRAIN	33312	■
CONTROL ROD	34103	■
TRUNNION - SELECT ROD	34410	■
DUST COVER HOLDER	34504	■
DUST COVER	34506	■
SUPPORT ROD	34559	■
SUPPORT ROD BRACKET	34560	■
SUPPORT ROD DAMPER	34582	■
ELECTRIC SHIFT SELECTOR	34902	■
LEVER - CONTROL	34903	■
INDICATOR-SELECT	34910	■
ROD COMPLETE - COMPRESSION	34912	■
SHAFT ASSY. - LEVER	34915	■
PIN - POSITION PLATE	34917	■
SET - CONTROL LEVER KNOB	34920	■
SPRING - RETURN	34926	■
ROD - SELECT	34935	■
SOLENOID ASSY. - SELECT LOCK	34970	■
PARK POSITION SWITCH - A/T MODELS	34980	■
FINAL GEAR	38101	■
CASE - DIFFERENTIAL	38410	■
GEAR - SIDE	38413	■
PINION MATE	38415	■
SHAFT - PINION MATE	38417	■
ELECTRIC COUPLING ASSY.	38761	■
BUSHING - CLUTCH PEDAL	46526	■
CLUTCH PEDAL	46540	■
SENSOR ASSY. - HI-LOW POSITION, TRANSFER	86012	■
SENSOR ASSY. - FLUID TEMPERATURE, TRANSFER	86013	■
SENSOR ASSY. - LOCK POSITION, TRANSFER	8603	

ADAS CONTINUED		PNC	Coverage
CONTROL MODULE BSW	28456	■	■
CAMERA ASSY-FR VIEW	28461	■	■
SOLENOID VALVE ASSY-BACK VIEW CAMERA	28479	■	■
CONTROL ASSY-CAN GATEWAY	28481	■	■
SOLENOID VALVE ASSY - BACK VIEW CAMERA	28499	■	■
BUZZER-SONAR SENSOR , FRONT	28501	■	■
CONTROL UNIT-SONAR SENSOR	28532	■	■
TUBE ASSY - WASHER,REAR VIEW CAMERA	28975	■	■
AVM CAMERA FINISHER	73979	■	■
CAMERA CONTROLLER	284A1	■	■
LANE KEEP CAMERA	284C2	■	■
SIDE OBSTACLE WARNING SENSOR ASSY	284K0	■	■
<b>FUEL SYSTEM</b>			
FUEL DAMPER ASSY.	11300	■	■
TUBE - E.G.R.	14120	■	■
ACTUATO-SUPRCHGR BYPASS VALV	14480	■	■
VALVE - E.G.R. CONTROL	14710	■	■
E.G.R. PASSAGE	14711	■	■
TUBE - VACUUM	14729	■	■
TUBE-EVAP CONTROL	14912	■	■
PURGE CONTROL VALVE	14930	■	■
EVAP CAN PRGE VOL CONT SOL VLV	14931	■	■
PURGE CONTROL SOLENOID	14932	■	■
EVAP PURGE RESONATOR	14934	■	■
DRAIN CUT VALVE ASSY.	14936	■	■
ASSY-PURGE PUMP	14941	■	■
VAPOR CANISTER ASSY.	14949	■	■
SCV SOLENOID VALVE	14951	■	■
VACUUM DELAY VALVE	14958	■	■
PURGE CUT VALVE	14963	■	■
SCV CONTROL VAC SOLENOID VALVE	14967	■	■
VIAS CONTROL SOLENOID VALVE ASSY.	14968	■	■
VALVE ASSY-ADMISSION	16116	■	■
IAS UNIT	16250	■	■
PROTECTOR-FUEL RAIL,D-INJ HIGH PRESSURE	16265	■	■
FUEL STRAINER ASSY.	16400	■	■
FUEL STRAINER UPPER COVER	16404	■	■
INJECTOR HOSE	16409	■	■
FUEL RAIL CROSSOVER TUBE	16441	■	■
DUCT - HOT AIR	16530	■	■
AIR TEMPERATURE SENSOR	16580	■	■
RESONATOR	16585	■	■
COVER - EXHAUST MANIFOLD	16590	■	■
INJECTOR - FUEL	16603	■	■
INSULATOR-FUEL PUMP,HIGH PRESSURE	16634	■	■
FUEL PRESSURE SENSOR	16637	■	■
PUMP ASSY. - ELECTRIC FUEL	17012	■	■
FUEL CONNECTOR	17103	■	■
TANK - FUEL	17201	■	■
HOSE/TUBE FUEL FILLER	17220	■	■
NECK FUEL FILLER	17222	■	■
CAP - FUEL FILLER	17251	■	■
FUEL HOSE PROTECTOR	17271	■	■
FUEL TANK PROTECTOR	17285	■	■
HOSE - VENTILATION	17325	■	■
VALVE - FUEL CHECK	17330	■	■
VENTILATION HOSE	17333	■	■
RING - O, FUEL GAUGE	17342	■	■
BREATHER VALVE	17368	■	■
VACUUM CUT-OFF VALVE	17372	■	■
TUBE - FUEL OUTLET (TANK TO STRAINER)	17501	■	■
TUBE - AIR SUPPLIER	17508	■	■
TUBE - FUEL RETURN	17510	■	■
TUBE ASSY. - FRONT FUEL	17520	■	■
HIGH PRESSURE FUEL TUBE ASSY	17522	■	■
PROTECTOR-FUEL RAIL	17524	■	■
RETURN HOSE	17551	■	■
FUEL OUTLET HOSE	17565	■	■
FUEL TUBE PROTECTOR	17576	■	■
AUTO-ADJUST ACCEL PEDAL	18002	■	■
ACTUATOR-ACCELERATOR PEDAL	18006	■	■
ARM - ACCELERATOR PEDAL	18010	■	■
BRACKET ASSY. - ACCELERATOR PEDAL	18021	■	■
ACCELERATOR PEDAL	18110	■	■
WIRE - ACCELERATOR	18150	■	■
ACCELERATOR STOPPER COVER	18158	■	■
SPRING - RETURN	18215	■	■
GASKET - FRONT TUBE	20711	■	■
WATER TEMPERATURE SWITCH	22120	■	■
VIASVALVE VACUUM TANK	22328	■	■
SWITCH - CANNISTER CONTROL VACUUM CK	22360	■	■
SENSOR ASSY. - PRESSURE	22368	■	■

VEHICLE COMPONENTS COVERED		PNC	Coverage
SENSOR ASSY-VACUUM	22369	■	■
FUEL TEMPERATURE SENSOR	22629	■	■
INTAKE AIR TEMP SENSOR	22631	■	■
SENSOR - TANK FUEL TEMPERATURE	22634	■	■
SENSOR-EXHAUST GAS TEMPERATURE	22640	■	■
FUEL DAMPER	22675	■	■
FUEL HOSE DAMPER ASSY.	22676	■	■
UNIT - FUEL LEVEL SENDING	25060	■	■
EVAP CONTROL SYSTEM PRESSURE SENSOR	25086	■	■
EX GAS SENSOR HOLD RELAY	25226	■	■
DUCT - FRESH AIR	62860	■	■
BASE ASSY-FUEL FILLER	78120	■	■
<b>AIR CONDITIONING &amp; HEATER</b>			
BRACKET - COMPRESSOR	11910	■	■
BELT - COMPRESSOR	11920	■	■
A/C COMP IDLER PULLEY	11924	■	■
BRACKET - IDLER PULLEY	11926	■	■
SUNLOAD SENSOR	21710	■	■
SENSOR GRILLE	21712	■	■
AIR PURIFIER SENSOR	22367	■	■
REAR HEATER RELAY	25207	■	■
RELAY - BLOWER MOTOR	25208	■	■
VACUUM HOSE	25214	■	■
RELAY - AIR CONDITIONER	25218	■	■
RELAY-REAR AIR CONDITIONER	25225	■	■
FAN CONTROL AMPLIFIER	25246	■	■
RELAY - MAX COLD DOOR	25257	■	■
REAR - HEATER RELAY	25274	■	■
REAR HEATER CONTROL FRONT	25307	■	■
UNIT - HEATER	27000	■	■
REAR HEATER CORE	27013	■	■
REAR HEATER MOTOR	27014	■	■
CONTROL - AIR COND.	27030	■	■
VALVE ASSY. - VACUUM SELECTOR	27031	■	■
CONTROL ASSY. - AUTO AIR CONDITIONER	27032	■	■
REAR HEATER UNIT	27035	■	■
A/C HARNESS	27038	■	■
SWITCH ASSY. - FAN	27041	■	■
CASE - BLOWER	27065	■	■
FAN & MOTOR	27070	■	■
HEATER CONNECTOR	27071	■	■
HEATER SWITCH REGISTER	27077	■	■
ACTUATOR - VACUUM	27080	■	■
ASPIRATOR	27084	■	■
VACUUM WATER COCK	27090	■	■
IN-VEHICLE SENSOR	27096	■	■
HEATER CORE	27115	■	■
HEATER COCK	27116	■	■
GAS SENSOR ASSY.	27118	■	■
CABLE - AIR COND. CONTROL	27134	■	■
MODE DOOR ACTUATOR	27141	■	■
DUCT - ASPIRATOR	27143	■	■
COMPRESSOR SHAFT SEAL	27144	■	■
WATER TEMP SENSOR	27150	■	■
DUCT - CENTER DEFROSTER	27151	■	■
SIDE DEFROSTER DUCT	27152	■	■
DEFROSTER HOSE	27164	■	■
NOZZLE - FLOOR	27167	■	■
DUCT - HEATER	27173	■	■
REAR A/C DUCTING COMPONENTS	27175	■	■
REAR HEATER RESISTOR	27178	■	■
HOSE - HEATER	27181	■	■
HEATER TUBE	27185	■	■
THERMISTOR	27322	■	■
THERMO CONTROL AMPLIFIER	27330	■	■
BLOWER MOTOR ASSY.	27375	■	■
BLOWER IMPELLER	27383	■	■
REAR COOLING UNIT	27405	■	■
REAR EVAPORATOR ASSY.	27410	■	■
RR A/C-HIGH TUBE	27413	■	■
RR A/C-LOW TUBE	27414	■	■
REAR COOLER CASE ASSY.	27415	■	■
BI-LEVEL MOTOR ACTUATOR	27427	■	■
FEEDBACK RESISTOR (PBR)	27433	■	■
AIR MIX DOOR ACTUATOR	27452	■	■
AIR PURIFIER CASE	27461	■	■
AIR PURIFIER ASSY.	27492	■	■
FRESH AIR VENT SWITCH ASSY.	27513	■	■
HOSE - DRAIN	27619	■	■
EVAPORATOR ASSY.	27621	■	■
SWITCH-HIGH PRESSURE	27623	■	■
VALVE - EXPANSION	27625	■	■

VEHICLE COMPONENTS COVERED		PNC	Coverage
COMPRESSOR ASSY.	27630	■	■
AMPLIFIER - BLOWER CONTROL	27631	■	■
DOUBLE SOLENOID VACUUM VALVE	27635	■	■
RECEIVER/DRYER	27640	■	■
SWITCH - LOW PRESSURE	27648	■	■
CONDENSER	27650	■	■
MOTOR - CONDENSER FAN	27651	■	■
FAST IDLE DIAPHRAGM	27655	■	■
MAGNETIC CLUTCH	27659	■	■
SNAP RING	27660	■	■
REAR A/C FAN SWITCH ASSY.	27665	■	■
DUCT - SIDE VENTILATOR	27670	■	■
ACTUATOR- VENTILATOR DOOR UPPER	27671	■	■
PIPE COOLER	27677	■	■
CONNECTOR - JOINT	27680	■	■
ACTUATOR - DEFROSTER DOOR	27685	■	■
ACTUATOR-DRIVER SIDE, AIR MIX DOOR	27700	■	■
ACTUATOR-DRIVER SIDE, INTAKE DOOR	27701	■	■
ASPIRATOR FAN	27703	■	■
AMBIENT SENSOR	27704	■	■
SENSOR - SOLAR	27705	■	■
SENSOR-AMBIENT AIR TEMP	27706	■	■
AUTO TEMP CNTRL UNIT	27708	■	■
SENSOR-REFRIGERANT TEMP,COMPRESSOR DISCHARGE	27710	■	■
VACUUM CONTROL HOSE	27711	■	■
SENSOR-AIR TEMP,PTC HEATER OUTLET	27712	■	■
AMPLIFIER - FAN CONTROL	27717	■	■
SENSOR - INTAKE	27723	■	■
ASPIRATOR	27726	■	■
SENSOR - IN-VEHICLE	27727	■	■
ASPIRATOR DUCT	27728	■	■
SEAL - A/C COMPRESSOR SHAFT	27730	■	■
SWITCH - COOLANT TEMPERATURE	27732	■	■
SUNLOAD SENSOR AMPLIFIER	27738	■	■
ACTUATOR ASSY.-AIR MIX DOOR	27740	■	■
SHIFT ACTUATOR VALVE	27741	■	■
MAGNETIC CLUTCH ASSY.	27742	■	■
RING - SNAP	27744	■	■
SOLENOID VALVE SET	27746	■	■
DEFROSTER DOOR ACTUATOR	27747	■	■
L/H-SIDE AIR MIX DORR ACTUATOR	27748	■	■
TRANSISTOR-POWER	27750	■	■
ASPIRATOR FAN	27752	■	■
SENSOR ASSY. - AMBIENT	27755	■	■
AMBIENT AIR TEMP SENSOR	27757	■	■
MAGNETIC CLUTCH AMPLIFIER	27762	■	■
SEAL-CONDENSER SIDE	27763	■	■
VALVE-EXPANSION	27764	■	■
SUPER HEAT SWITCH	27765	■	■
THERMAL PROTECTOR	27770	■	■
HEATER DUCT	27830	■	■
REAR FLOOR HEATER DUCT	27832	■	■
CENTER DUCT	27850	■	■
VENTILATOR - CENTER	27860	■	■
VENT DOOR/DUCT	27923	■	■
FLOOR REAR HEAT/AC DUCT- FRONT PIECE	27930	■	■
FLOOR REAR HEAT/AC DUCT- REAR PIECE	27931	■	■
AIR PURIFIER GRILLE ASSY.	27945	■	■
DUCT - HEATER REAR	27950	■	■
AMBIENCE UNIT	27972	■	■
AUTO AIR CONTROL AMPLIFIER	28520	■	■
ACCELERATION CUT TIMER	28525	■	■
SUPER HEAT TIMER	92184	■	■
VALVE-EXPANSION	92200	■	■
HOSE ASSY HEATER	92310	■	■
REAR WASHER TUBE	92316	■	■
REAR HEATER HOSE	92330	■	■
REAR HEATER TUBE	92331	■	■
PIPE ASSY-FR COOLER, HIGH	92400	■	■
REAR COOLER PIPE (REAR)	92401	■	■
REAR COOLER ASSY (FRONT)	92420	■	■
REAR HIGH/LOW COOLER PIPE	92433	■	■
LOW PRESSURE FLEXIBLE HOSE	92441	■	■
EXCHANGER-HEAT	92446	■	■
PIPE - COOLER	92460	■	■
PIPE ASSY. - REAR COOLER, HIGH C	92462	■	■
HIGH PRESSURE FLEXIBLE HOSE	92471	■	■
FLEXIBLE HOSE - LOW PRESSURE	92480	■	■
FLEXIBLE HOSE - HIGH PRESSURE	92490	■	■
COMPRESSOR RPM SENSOR	92855	■	■

# AROUND THE CLOCK COVERAGE



You have immediate access to Emergency Roadside Assistance when and where you need it – 24 hours a day, 365 days a year – by simply calling the dedicated toll-free Customer Assistance number



ELITE.  
PROTECTION  
PROGRAM



[owners.infiniti.com/elite](https://owners.infiniti.com/elite)

Disclaimer: This brochure, which is limited in size, is not a contract. Read a sample INFINITI Elite Extended Protection Plan at your Retailer, and read your actual Service Contract as its terms, conditions, exclusions and limitations control.

**In Florida, INFINITI Extended Services North America is backed by Nissan Extended Services North America, Inc., P.O. Box 685004, Franklin, TN, 37068-5004. License #60128. Replacement of any part will be made with a new or remanufactured Genuine INFINITI or INFINITI-approved replacement part in use at the time of repair. The replacement part may differ from the original.**

Elite is a registered trademark of Nissan North America, Inc. The INFINITI name and logos are trademarks owned by or licensed to Nissan Motor Co. Ltd. and / or its North American subsidiaries.

©2022 INFINITI Extended Services North America. All rights reserved. Contact us at 800-662-6200